

SPLASH Beam DMX Channel

Standard Mode17ch	Simple Mode14ch	Function	Value	Percent/Setting
1	1	Pan	000-255	0。 -540°
2		Pan fine-tuning	000-255	16bit Adjustable
3	2	Tilt	000-255	0°-270°
4		Tilt fine-tuning	000-255	16bit Adjustable
5	3	Pan/Tilt Speed	000-255	From fast to slow
6	4	Dimmer	000-255	0-100%
7		Dimmer fine-tuning	000-255	16bit adjustable
8	5	Strobe	000-007	No function
			008-015	Turn on
			016-131	Effect 1
			132-167	Effect 2
			168-203	Effect 3
			204-239	Effect 4
			240-247	Effect 5
			248-255	Turn on
			0	Open
			1-11	White to red
			12-20	Red to orange
			21-29	Orange to blue green
			30-38	Blue green to green
			39-47	Green to yellow green
			48-57	Yellow green to blue purple
			58-66	Blue purple to purple
			67-75	Purple to yellow
			76-84	Yellow to plum red

9	6	Color wheel	85-93	Plum red to blue
			94-103	Blue to CTO5600K
			104-112	CTO5600K to cool color
			113-121	Cool color to Fluorescence
			122-129	Fluorescence to white light
			130-134	Color 1 (Red)
			135-138	Color 2 (Orange)
			139-143	Color 3 (Blue green)
			144-147	Color 4 (Green)
			148-152	Color 5 (Yellow green)
			153-157	Color 6 (Blue purple)
			158-161	Color 7 (Purple)
			162-166	Color 8 (Yellow)
			167-171	Color 9 (Plum red)
			172-176	Color 10 (Blue)
			177-180	Color 11 (CTO5600K)
			181-185	Color 12 (Cool color)
			186-189	Color 13 (Fluorescence)
			190-220	Color scroll, from fast to slow
			221-224	Stop
			225-255	Reverse color scroll, from slow to fast
10	7	Color Fine	000-255	Color Fine
			000-003	Open
			004-007	Gobo 1
			008-011	Gobo 2
			012-015	Gobo 3
			016-019	Gobo 4
			020-023	Gobo 5

11	8	Gobo wheel	024-027	Gobo 6
			028-031	Gobo 7
			032-035	Gobo 8
			036-039	Gobo 9
			040-043	Gobo 10
			044-047	Gobo 11
			048-051	Gobo 12
			052-055	Gobo 13
			056-059	Gobo 14
			060-064	Gobo 14 shaking, from slow to fast
			065-068	Gobo 13 shaking, from slow to fast
			069-072	Gobo 12 shaking, from slow to fast
			073-076	Gobo 11 shaking, from slow to fast
			077-080	Gobo 10 shaking, from slow to fast
			081-084	Gobo 9 shaking, from slow to fast
			085-088	Gobo 8 shaking, from slow to fast
			089-092	Gobo 7 shaking, from slow to fast
			093-096	Gobo 6 shaking, from slow to fast
			097-100	Gobo 5 shaking, from slow to fast
			101-104	Gobo 4 shaking, from slow to fast
			105-108	Gobo 3 shaking, from slow to fast
			109-112	Gobo 2 shaking, from slow to fast
			113-115	Gobo 1 shaking, from slow to fast
			116-119	Open
			120-189	Gobo scroll, from fast to slow
			190-193	Stop
			194-255	Reverse gobo scroll, from slow to fast
12	9	Prism 1	000-015	No function

12	9	Prism 1	016-255	Prism 1 insert
13	10	Prism 2	000-015	No function
			016-255	Prism 2 insert
14	11	Prism rotation	000-127	Prism index
			128-189	Prism rotation, from fast to slow
			190-193	Stop
			194-255	Reverse prism rotation, from slow to fast
15	12	Frost	000-007	No function
			008-255	0-100%
16	13	Focus	000-255	0-100%
17	14	Function channel	000-039	No function
			040-049	Exit silent mode
			050-089	No function
			090-099	Silent mode
			100-129	No function
			130-139	Turn on the bulb after 4 seconds
			140-149	Reset pan/tilt after 4 seconds
			150-199	No function
			200-209	Reset all
			210-229	No function
			230-239	Turn off the bulb after 4 seconds
			240-255	No function